



**INTERNAL ARC MONITOR SYSTEM
DESCRIPTIVE AND OPERATIONAL HANDBOOK**



INDEX:

- 1 - Introduction.**
- 2 - Technical data.**
 - 2.1 - MAI2.**
 - 2.2 - MO2.**
 - 2.3 - Testing.**
- 3 - Installation.**
 - 3.1 - optical fibers.**
 - 3.2 - Wiring.**
 - 3.3 - Assembly.**
- 4 - Starting up the system.**
 - 4.1 - Configuration and tests.**
 - 4.2 - Calibration.**
- 5 - System description.**
 - 5.1 Composition.**
 - 5.2 Operation.**
 - 5.3 Precautions.**
 - 5.4 Interpretation of numeric indications.**
- 6 - Dimensional blueprint MAI2-CC.**
- 7 - Dimensional blueprint MAI2-SC.**
- 8 - Blocks diagram MAI2-CC-TR.**
- 9 - Blocks diagram MAI2-CC-TC .**
- 10 - General blueprint MAI2.**
- 11 - Dimensional blueprint MO2.**
- 12 - Blocks diagram MO2.**
- 13 - Typical wiring MAI2/MO2.**

1 - Introduction

The internal arcs by accident, bad contacts and other contingencies causing electrical failures are one of the most severe problems for low, middle and high voltage electrical switchgears.

The worst effects of these arcs are serious injuries or death, extended damage to installations and rendering the equipment unavailable for prolonged periods of time.

The preventive actions must be based on knowledge of the internal arc phenomena, and measures to overcome such event.

To summarize, the following points can be expressed as the basic criteria for the electrical switchgears safety:

1. - Preventive measures in the design.
2. - Limit the time of the arc.
3. - Toleration of the increment in pressure.
4. - Toleration of the increment in temperature.

A good design shall include a sum of mechanisms to prevent the occurrence of internal arcs; or to minimize its effect in the personnel and the equipment.

In general, three stages can be established in the internal arc processes:

1. - Compression stage: production of a fast overpressure without gas emissions.
2. - Emission stage: Gases are generated.
3. - Fusion stage: Solid material is thermally affected.

To prevent risks of overpressure and material fusion, the activated mechanisms shall interrupt the arc in less than 50ms (milliseconds).

If we consider that the overcurrent protection response time for Medium Voltage is in the order of a second, is easy to conclude that to protect the personnel it is necessary to mechanically reinforce the switchgear, adding a considerable cost.

That is why BOHERDI ELECTRÓNICA has developed its MAI2 Internal arc Monitor, an intrinsic protection, independent of adjustments and coordination of other protections, with its own detection and activation times in the order of 1 millisecond, which added to the breaker actuation time, represents a value below 50 milliseconds, fundamental to limit or prevent any material damage and to protect the personnel with an inferior cost of mechanically reinforce the electric switchgears; and with a higher efficiency.

BOHERDI ELECTRÓNICA system is based in the optical detection of the arc, with luminescence sensors, sensitive to quantities superior of 1000lux, and transmitted via optical fibers to a photo-transistor that transforms the light signal in electric signal.

The optical fiber transmission immunize the system from interferences generated by the operation of other equipment in its proximity. All components in the system are immunized and tested against electromagnetic noise and interference, eliminating the risk of untimely operation (activation) of the monitor, which is a characteristic problem of systems transmitting the signal via cables.

Besides its high speed operation, the system presents other advantageous characteristics:

- Uses plastic optical fibers, easy to install since allows a curvature radio higher or similar to 25mm.

- The light captor is easy to apply to the end of the fiber, since this one has a thread and a pressure nut, by which is firmly attached.

- Preparation for the end of the fiber does not require special tools, only common, good cutting tools.

- This allows for the easy change of a light captor in the area where the arc was produced, without needing to change the entire length of the fiber installed to the monitor.

- Built in modules with plug-in boards, easy to replace and exchange.

- The over-current sensor is an extractable board in the monitor. It has an automatic short-circuit connector input, ending in a pass terminal. This allows for replacing the board without affecting the functioning of other working protections.

The BOHERDI ELECTRÓNICA (MAI2) Internal arc Monitor has been successfully tested under the IEC 60068-2-38 & IEC 60255-5 norms and evaluated with satisfaction in an electric board internal arc test conducted by CEPEL.

2 - Technical Data

2.1 - Models:

There are two internal arc Monitors, each with two possible versions:

MAI2-CC: This model includes an overcurrent sensor that detects not only the electric arc, but also the presence of overcurrent. The overcurrent signal is internally propagated and retransmitted via optical fiber so it can be used together with arc detection to generate the trip signals.

MAI2-SC: This model does not include an overcurrent sensor. However, it can receive and use the overcurrent information generated in monitor model **MAI2-CC**.

The versions for each model are the following:

MAI2-XX-TR: The equipment includes a tripping board using transistors as the switching element, appropriate with equipment with DC opening coils.

MAI2-XX-TC: The equipment includes a tripping board using triacs as the switching element, appropriate with equipment with AC opening coils.

2.1.1 – General characteristics of MAI2:

Characteristics:	
Brand	Boherdi Electrónica
Model	MAI2-SC , MAI2-CC
Functioning type	Electronic
Service type	Permanent
optical inputs:	
With numeric indication	8
Overcurrent Signal, arc repetition	3
optical outputs:	
arc light repetition	1
Overcurrent signal repetition	1
Tripping output (TC version)	
Quantity	4
Tripping output (TR version)	
Quantity	5



Tripping Optotransistor (TC version)

Quantity	1
----------	---

Tripping Alarm

Quantity	2 NO
----------	------

Overcurrent Alarm (mod. CC)

Quantity	1 NOA
----------	-------

Transducer current failure alarm (mod. CC)

Quantity	1 NC
----------	------

Power failure alarm

Quantity	1 NC
----------	------

Visible Indicators:

Power supply on	Yellow Led
Monitor in alert status	Decimal point ON in led display
Flash detection (1 to 8)	Numeric display
Overcurrent detection	Green Led
Tripping	Red Led

Controls at front:

Arc flash and tripping reset	Push button
Overcurrent reset (mod. CC)	Push button
Overcurrent simulation (mod. CC)	Push button

Internal board configuration:

Current jumper	With/ Without
Inhibition jumper	YES / NO
Receptor jumper	Current / Light
Threshold adjustment>> (mod. CC)	Preset

Dimensions:

Height:	156mm
Width:	308mm (Mod. CC) 231mm (Mod. SC)
Depth:	201mm

2.1.2 – MAI2 Electrical characteristics :

Characteristics

Power voltages	48, 110, 220 Vcc, 220 Vca
Maximum consumption	15W
Admissible environmental temperature	-12...60°C



Tripping outputs (TC version)	
Maximum current (permanent)	1 A.
Maximum current (200 ms)	5 A.
Maximum start current	10 A.
Minimum maintenance current	50 mA
Leakage current (@220Vca 50Hz)	8 mA
Maximum voltage	400Vdc/250Vca

Tripping outputs (TR version)	
Maximum current (permanent)	5 A.
Maximum start current	10 A.
Leakage current (200Vdc)	0.5mA
Maximum voltage	250Vdc

Tripping Optotransistor (TC version)	
Admissible max. current	80mA
Admissible max. voltage	250V

Tripping alarm (relay)	
Breaking capacity max. 220Vac	5 A.
Breaking capacity max. 220Vdc	125mA

Others Alarms (optotransistor)	
Admissible max. current	20mA
Admissible max. voltage	250V

Current board (CC model)	
Nominal current (In)	1 ó 5A
Consumption	0,5VA
Max.permanent current	2 x In
Max current per 1 second.	175A
Tripping threshold	1.5 to 3xIn

Operating times	
From arc to tripping	<2ms
From overcurrent input to overcurrent output	<0,3ms

2.2.1 – MO2 general characteristics:

Characteristics:	
Brand	Boherdi Electrónica
Model	MO2
Functioning type	Electronic
Service type	Permanent



optical inputs:	
Quantity	3
optical outputs:	
Light arc repetition	1
Power failure alarm	
Quantity	1 NC
Visible indicators:	
Power supply ON	Yellow Led
Dimensions:	
Height:	93mm
Width:	76mm
Depth:	114mm

2.2.2 – MO2 electrical characteristics:

Characteristics	
Power voltages	48, 110, 220 Vcc, 220 Vca
Max. consumption	2W
Admissible environmental temperature	-12...60°C
Power loss alarm (optotransistor)	
Admissible max. current	20mA
Admissible max. tension	250V
Operating times	
From arc to light repetition	<1ms

2.3 - Tests:

Temperature and humidity cycles tests under the following standards:

- IEC 68-2-38 "Test Z/AD: Composite temperature/ humidity cyclic test".
- IEC 68-2-31 "Ec: Drop and topple, primarily for equipment-type specimens"
- IEC 68-2-32 "Ed: Free fall"
- IEC 68-2-6 "Fc: Vibration (sinusoidal)".

Electromagnetic tests under the following standards:

- IEC 255-5 "Insulation tests for electrical relays".
- IEC 255-22-1 "1Mhz burst disturbance tests".
- IEC 61000-4-2 "Electrostatic discharge immunity test".

3 - Installation:

3.2 - optical fibers:

The optical cables are single-wire acrylic fibers of 1mm diameter. An optical cable comes out from each anti-arc cell compartment to the monitor or optical mixer.

The following procedure is implemented to prepare the fibers that are attached to the captor endings:

- About 3mm of the cable outer jacket is removed without damaging the optical conductor nested in its interior, shaping it with a sharp tool; giving a conic form to the end of the conductor.
- The finishing tool needed is a piece of fine sand paper #150. The cone is dry polished, giving to it an approximate 90° angle (45° in relation to the cable axle, see fig. 2).
- Eliminate the thin powder, verify the interior of the captor does not contain foreign objects, loosen the fastener and introduce the end of the fiber to the end. Softly tighten the fastener or clamp.
- The end of the cable, already prepared as indicated before, is screwed with its support (see fig. 3) in the interior of the compartment, with the appropriate orientation.
- Trying, during installation, that the distance of the optical fiber within the cell is as short as possible with the only purpose to prevent a longer length is burned in case of an internal arc. A curled reserve portion of cable can be left on the exterior of the cell, to easily replace the burned cable after an arc.
- The optical cable is installed in the same fashion than an electrical cable, with the only special precaution to bend it with gentle movements, that is with high ratio curves. As a guideline, consider a 25mm as the minimum radio of a curve.

The termination and installation of the other end of the optical cable must be done as follows:

- A straight cut without piling the fiber. Sand paper the end to a 90° degree in reference to the axle of the cable with a sand paper #400 until obtaining a plane, smooth face. (See fig.1).
- Remove the plastic box in the arc monitor that has the detectors (DETECTORES) identification. Remove the board with the optodetectors and proceed with each optical fiber as follows.
- Loosen the fastener from the appropriate receptor or emitter. Introduce the optical fiber all the way in and gently press the fastener or clamp.
- Then, replace the board in its original position, put the fibers in the output channels and close the plastic box, guiding the fibers to maintain their positions within each channel and outputting from the front of the hole (See fig. 4).
- After this, introduce the box in the monitor.
- For the Optical mixer, remove the plastic box cap, loosen the fastener of the appropriate receptor or emitter, introduce the optical fiber all the way to the end, and gently press the fastener or clamp.
- Then reposition the mixer cap guiding the fibers to follow the existing guides in the cap, on both sides of the terminals (fig. 4).

The optical connections between a monitor and a mixer, or two mixers, will always be between an optical emitter and an optical receptor. The finishing on the ends of the optical cables are always done as previously described, with straight and plane cuts.

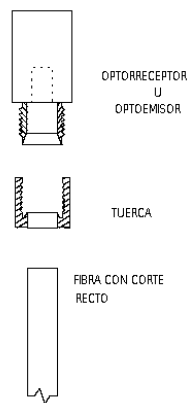


FIGURA 1

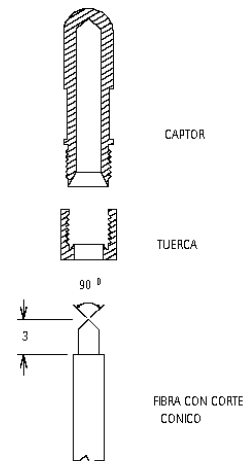


FIGURA 2

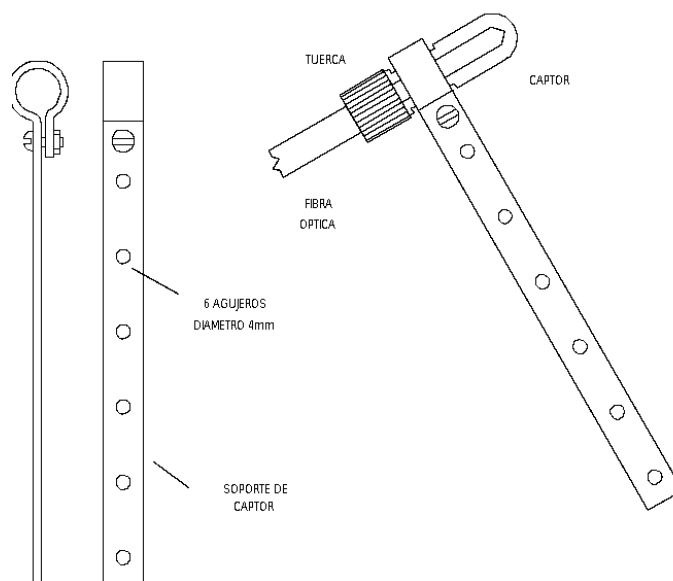


FIGURA 3

3.2 - Wiring:

See typical wiring in blocks diagram and blueprint.

3.3 - Assembly:

See dimensional diagrams for MAI2 y MO2.

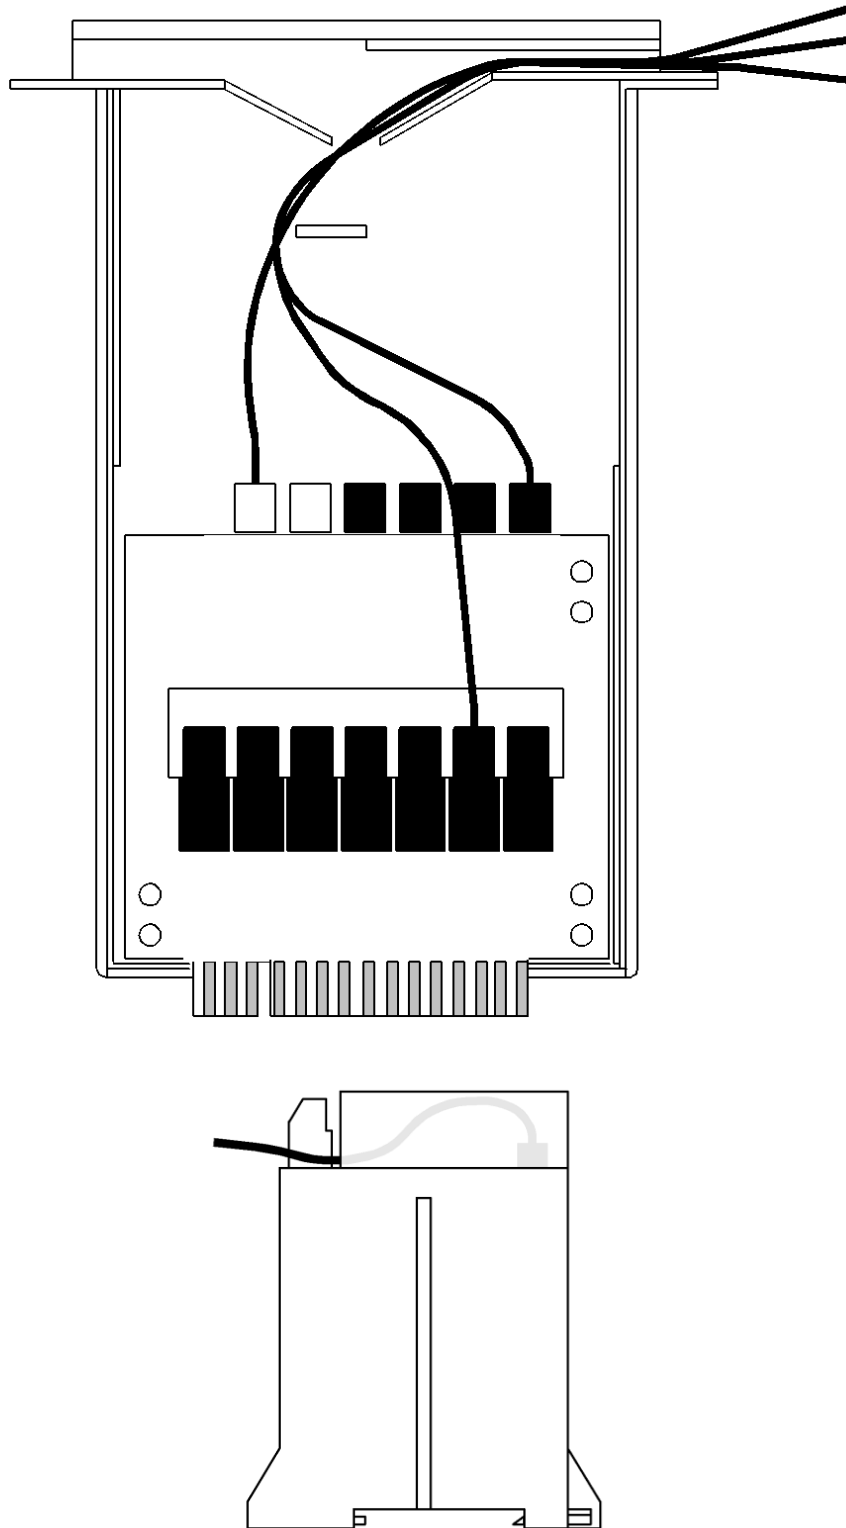


Fig. 4

4 - Starting up the system:

4.1 Configurations and tests:

Verify optical interconnections using a camera flash or a lamp.

Light detectors respond to sudden changes from a weak or medium light to a strong light, responding to the increment of light intensity. They do not respond to permanent light.

Test the equipment with a flash of light to the interior of the compartment; verify the signal reach the monitor and verify also the appropriate input number in display. The test can also be performed turning a lamp on next to the light captor.

If the current (CORRIENTE) jumper is in the CON position in the logic board (See fig. 5), an overcurrent is needed to produce trip signals. However, the display will indicate the number of the last activated receptor, regardless if it has not tripped, until the push button (switch) is RESET.

Any flash activating any of the 8 inputs, (#35 to 42), is repeated by the #33 optotransmitter and registered in the display.

The numbers 43, 44 or 45 inputs can be preset with the RECEPTOR jumper to work as a light arc input when in the light (LUZ) position, or as overcurrent information input in the current (CORRIENTE) position (See fig. 5).

When in the light (LUZ) position, the only function of the electronic logic board is to retransmit the flash on #33 transmitter. It is not registered in the display.

When it is in the current (CORRIENTE) position, retransmit the information on #34 transmitter and utilises the data to decide to issue a trip signal.

The eighth light input, #42, is very important since allows for certain selectivity in the electronic logic response by a third jumper called inhibition (INHIBICIÓN) (See fig. 5). When this jumper is on the NO position, #42 input functions like the other 7 previous inputs. When it is in the yes (SI) position, is inhibited to retransmit to #33 transmitter the light entering through the #42 receptor.

Also, if inhibition is activated, no response will be detected in tripping outputs 3, 4 and 5; the inhibition only affects the eighth input (#42). Figure 6 shows a terminals outline.

Once confirmed the fiber unions responsible to conduct direct arc or retransmitted light, it is possible to confirm the fiber unions conducting overcurrent.

The current board has 2 push buttons: a testing (PRUEBA) and a RESET buttons. Pressing the testing button mimic an overcurrent, a green led lights up in that board, also in the logic board, and an overcurrent signal is transmitted on #34 transmitter. This signal must reach other monitors from inputs numbers 43, 44 or 45 and is indicated with the a green light on the logic board.

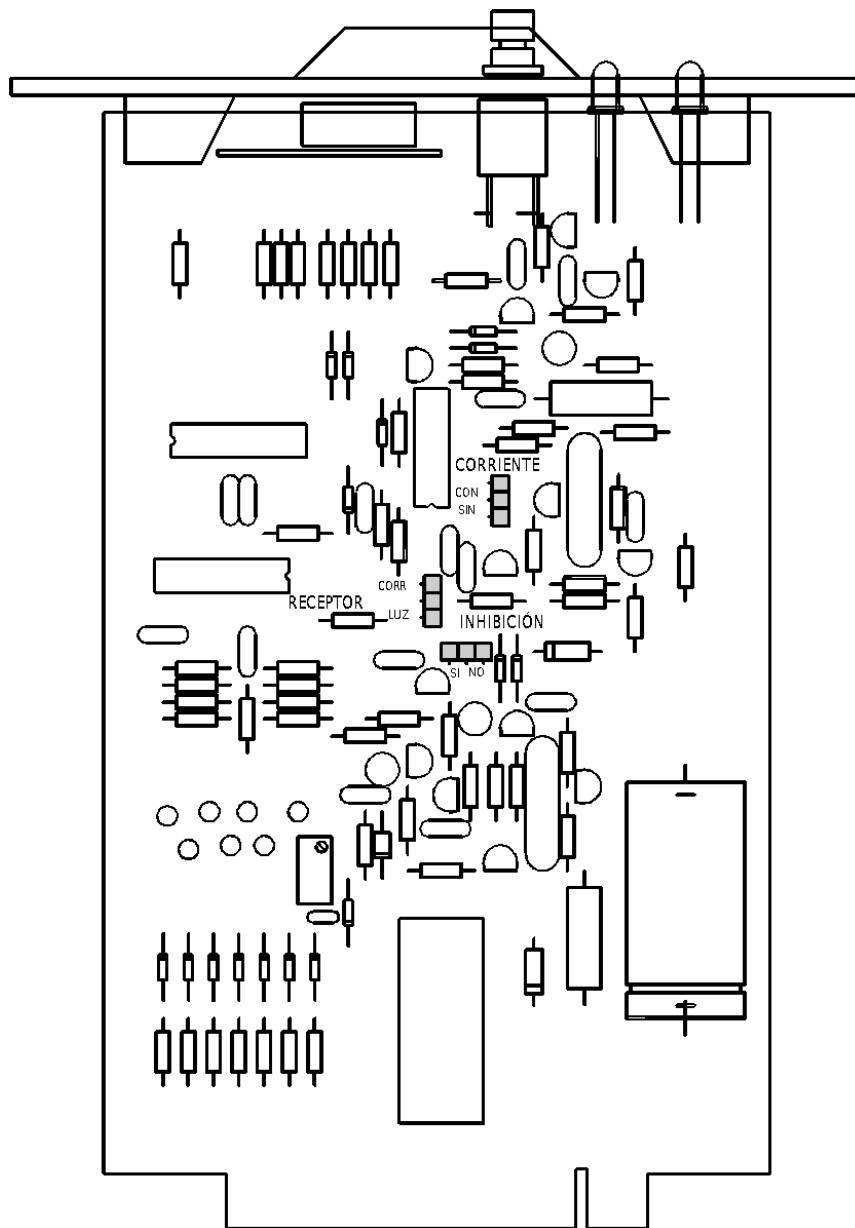


Fig. 5

When pressing and holding the testing (PRUEBA) button, an overcurrent signal is transmitted to verify its reception. When stop pressing the testing button, the transmission is interrupted and the green led from logic boards, local and remote, are turned off, indicating nonexistence of overcurrent in the system; however, an overcurrent alarm is registered (terminals 19 and 20) and local green led in the current board is ON. To reset these indications, press RESET button on same current board, although this action is not necessary for the correct operation of the system.

DISPAROS MAI2-SC-TC

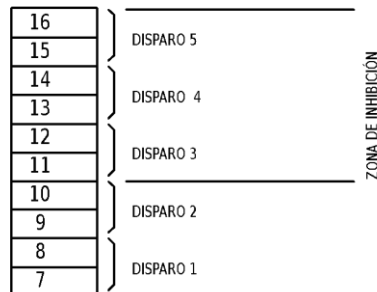


Fig. 6

4.2 - Calibration

The only calibration done in the system is the current threshold calibration on the current board.

The adjustment is made injecting the corresponding current in one phase and adjusting the Preset potentiometer in the current board until the Led is on or off. (See fig 7). The adjustment can be tested for the other 2 phases, one at the time. A simultaneous test for the three inputs has to be three-phased.

The precision of the threshold adjustment is to the order of +/-5% since it is not a measurement but a confirmation that the current has an abnormal value. For this reason, a single adjustment for all three phases was elected for the system.

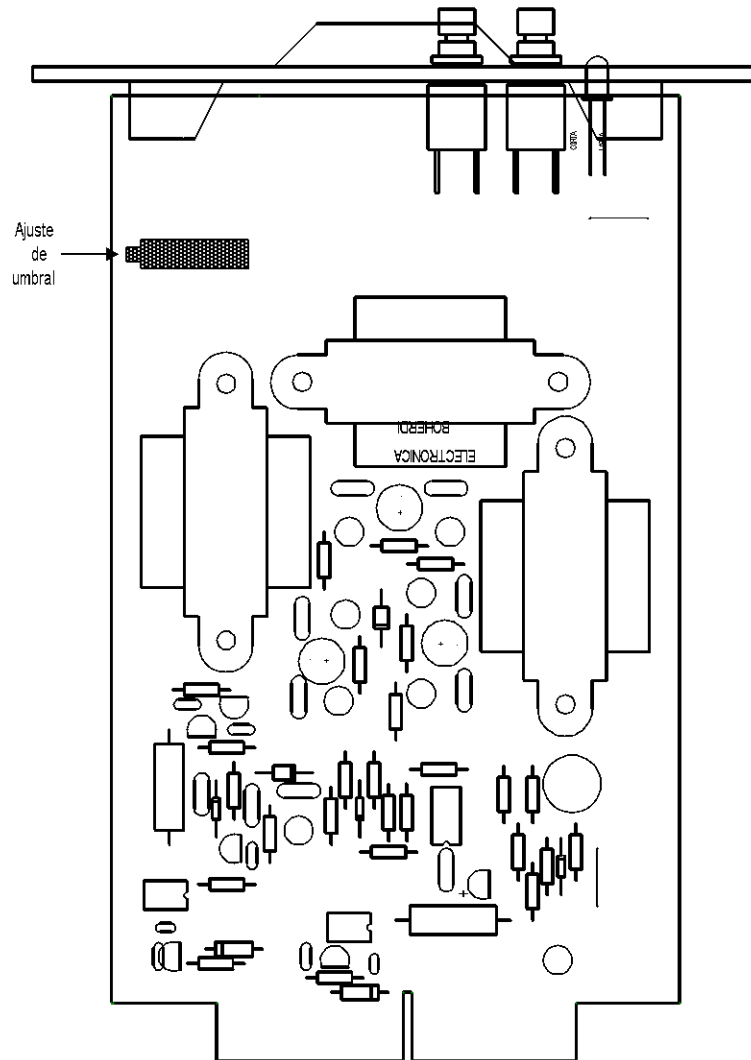


Fig. 7

5 - System description:

5.1 - Composition

The system includes BOHERDI Brand Arc Monitors and Optical Mixers, with MAI2-CC, MAI2-SC and MO2 respectively models.

MAI2 systems have optical inputs and outputs, visible indicators, overcurrent sensor (model CC), alarm outputs and a configurable operation logistic.

MO2 systems allow to unify signals from 3 arc sensors, (frequently using sensors from a same cell). This implies savings in optical fiber quantity and simpler wiring.

5.2 - Operation

5.2.1 - Signals inputs.

The protection system works detecting the light in sensors located in each monitored compartment. To release the tripping order the overcurrent is verified in an input cell.

5.2.2 - Overcurrent detection

The overcurrent is individually detected by measuring each fase current from the CT input. The current board verifies the intensity level comparing it with a preset value; and if this value is exceeded, produces a tripping habilitation of appropriate monitors. The connections are made with 25-26 terminals for phase R, 27-28 for S and 29-30 for T.

5.2.3 - Inhibition operation

Each logic board has an inhibition (INHIBICIÓN) jumper assigned to it. If jumper is in yes (SI) position, the arc light enters from the eighth input (#42), produces electrical excitation of only the first two trips (1 and 2, see fig. 6), not the rest; nor a light signal is transmitted on the light arc repeater from the optical fiber. When the jumper is in the NO position, five trips are electrically excited and the arc repetition is normally transmitted. The rest of the inputs are not affected by this function when operated without inhibition.

5.2.3 - Signals - Repetition.

Each arc monitor is capable of repeating arc light signals or overcurrent on the optical fibers.

The arc light entering from the eight optodetectors, numbers 35 to 42, is repeated on arc optotransmitter #33.

When the logic board RECEPTOR jumper is in the light (LUZ) position, the arc optotransmitter #33 also repeats the arc light information entering optodetectors

numbers 43, 44 or 45. The signal entering those optodetectors **DO NOT** produce electrical excitation of the system; nor is registered in the display since is only repeated in a passing through mode.

The overcurrent signal is issued in the monitor equipped with current board. This signal is repeated on the optical fiber from optotransmitter #34. To be received by another monitor must enter from either inputs numbers 43, 44 or 45; and the RECEPTOR jumper must be in the current (CORRIENTE) position. The overcurrent information is processed in the monitor logic operation board and is retransmitted by the overcurrent optical transmitter #34.

5.2.4 - Trips

The trip board for the equipment with TC version have four potential-free triacs to electrically excite the control coils of the power breakers and remote trip optotransistor. The trip boards for the TR version has five potential-free transistors, for both uses.

5.2.5 - Arc system alarm

Each arc detection system provides the following alarms:

Internal arc Monitor MAI2:

- Internal arc protection*: with two normal open relay contact outputs (NO).
- Overcurrent detection*: with normal open optotransistor output (NO).
- Open coil alarm*: with normal close optotransistor output (NC).
- Power supply failure alarm*: with normal close optotransistor output (NC).

Optical Mixers MO2:

- Power supply failure alarm*: with normal close optotransistor output (NC).

5.2.6 - Boards description; signaling

a) Power supply board:

The correct functioning of the power source is indicated with a yellow led on and low impedance between 5-6 terminals. If the power source fails or is interrupted, the current between those terminals are interrupted generating an alarm signal (NC logic).

b) Tripping board:

This board generates the power trips to open breakers, and also trips for teleprotection. The trip pulses last approximately 200ms.

c) Current board:

When the sensed current surpasses a predetermined threshold, a green led is

ON and the overcurrent alarm is activated (continuity exits between terminals 19-20). These signals are registered; and are cancelled pressing RESET on the front of the same board.

Confirmation of continuity in the three secondary coils of the current transformers is done by an optotransistor normally ON; and stop conducting to signal an alarm (NC logic).

The test (PRUEBA) push button simulates a current higher to the threshold and its purpose is to corroborate the overcurrent communication signal to other monitors interconnected with optical fibers.

d) Logic board:

The green led ON indicates reception of overcurrent information. This signal is not registered. The red led turns on when trip signal is issued. This last signal and the alarm signal are registered. Those can be cancelled with the reset push button in the front of the same board.

When a number is registered in the 7 segments display of any of the monitors, the respective listing has to be checked to relate such number with the corresponding sensor or the signal reception fiber for such installation, to track or monitor the signals reaching the arc monitor. These will allow you to know in which cell the arc was produced or to which equipment corresponds, in the case of a repeated signal.

5.3 - Precautions

IMPORTANT:

If for any reason is necessary to extract and reinstall a board of an arc monitor while the equipment is already installed and operating, the power source to the monitor must be disconnected first. With this action, unwanted trips are prevented. The power source can be disconnected by removing the power source board. The power source can be reconnected after waiting two minutes, which is the necessary time to discharge the capacitors.




The monitor has a high electrical capacity to maintain sufficient energy to allow trip signals even if an arc simultaneously cuts the power source of the monitor.

5.4 - Interpretation of numeric indications

When a light sensor is on, the display with the seven segments of the logic board indicates a digit from 1 to 8, which allows to identify the excited sensor or optical mixer. If a light signal is received from one to another monitor, the receptor arc monitor will also register the input number, but in this case will not reference the sensor nor a mixer, but the monitor that emitted the signal.




6 - Dimensional blueprint MAI2-CC

El Rack debe montarse respetando una distancia mínima de 6mm entre el circuito trasero y el panel de montaje.

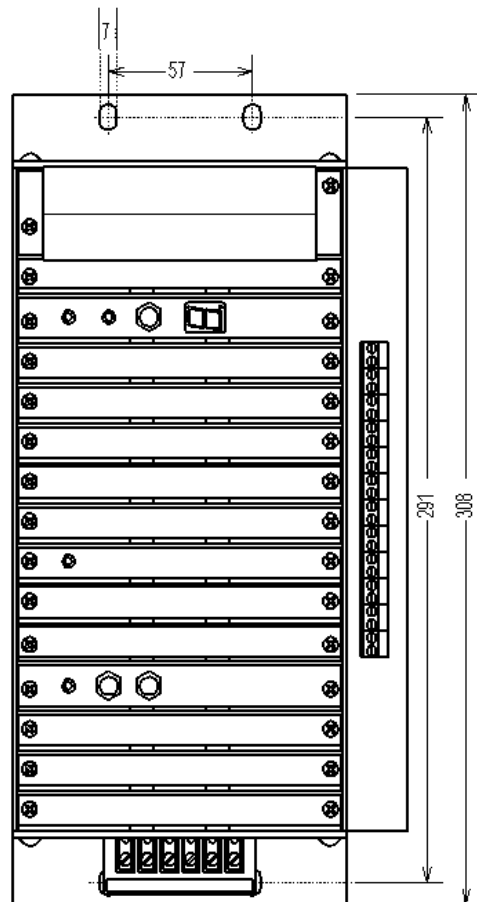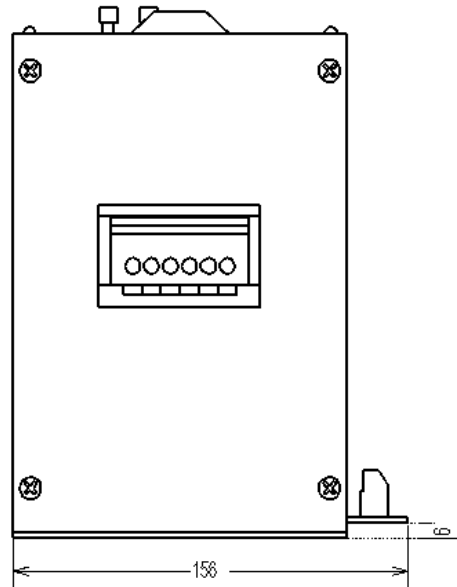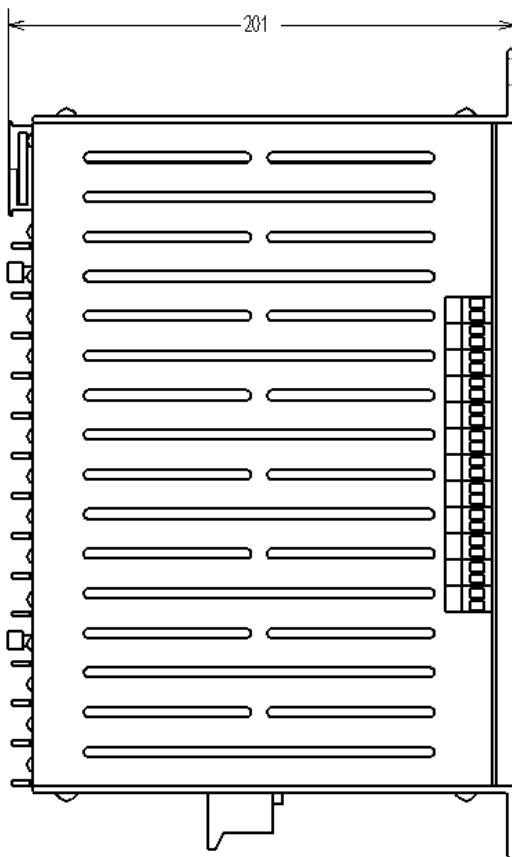


7 - Dimensional blueprint MAI2-SC


El Rack debe montarse respetando una distancia mínima de 6mm entre el circuito trasero y el panel de montaje.

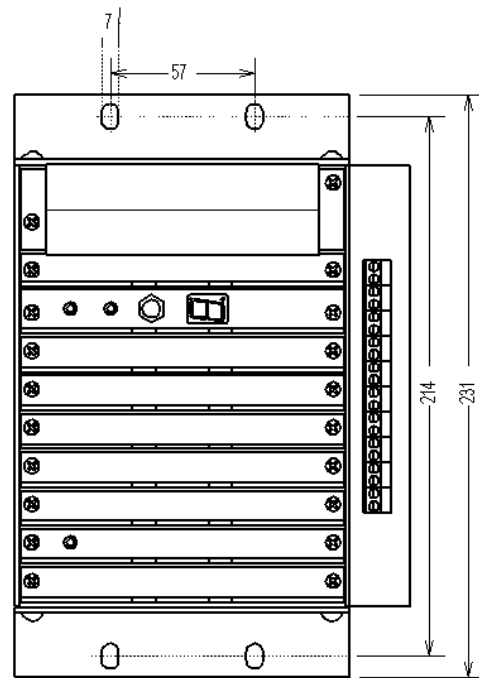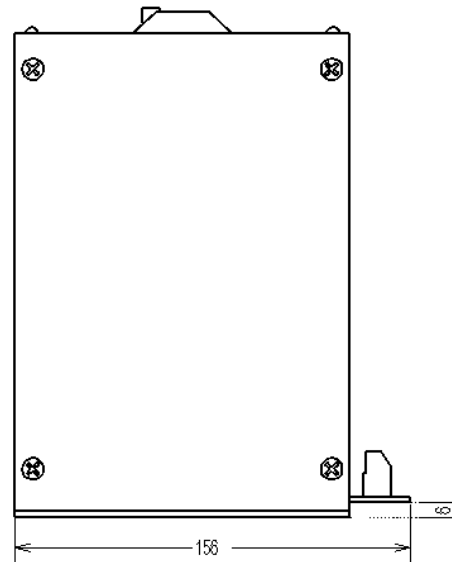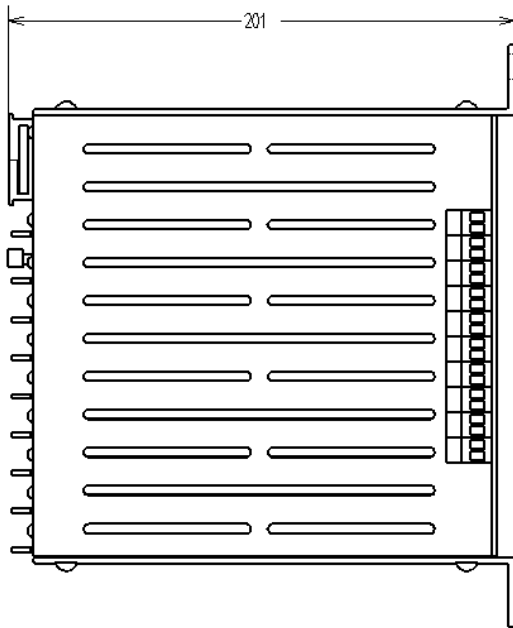

8 - Blocks diagram MAI2-CC-TR

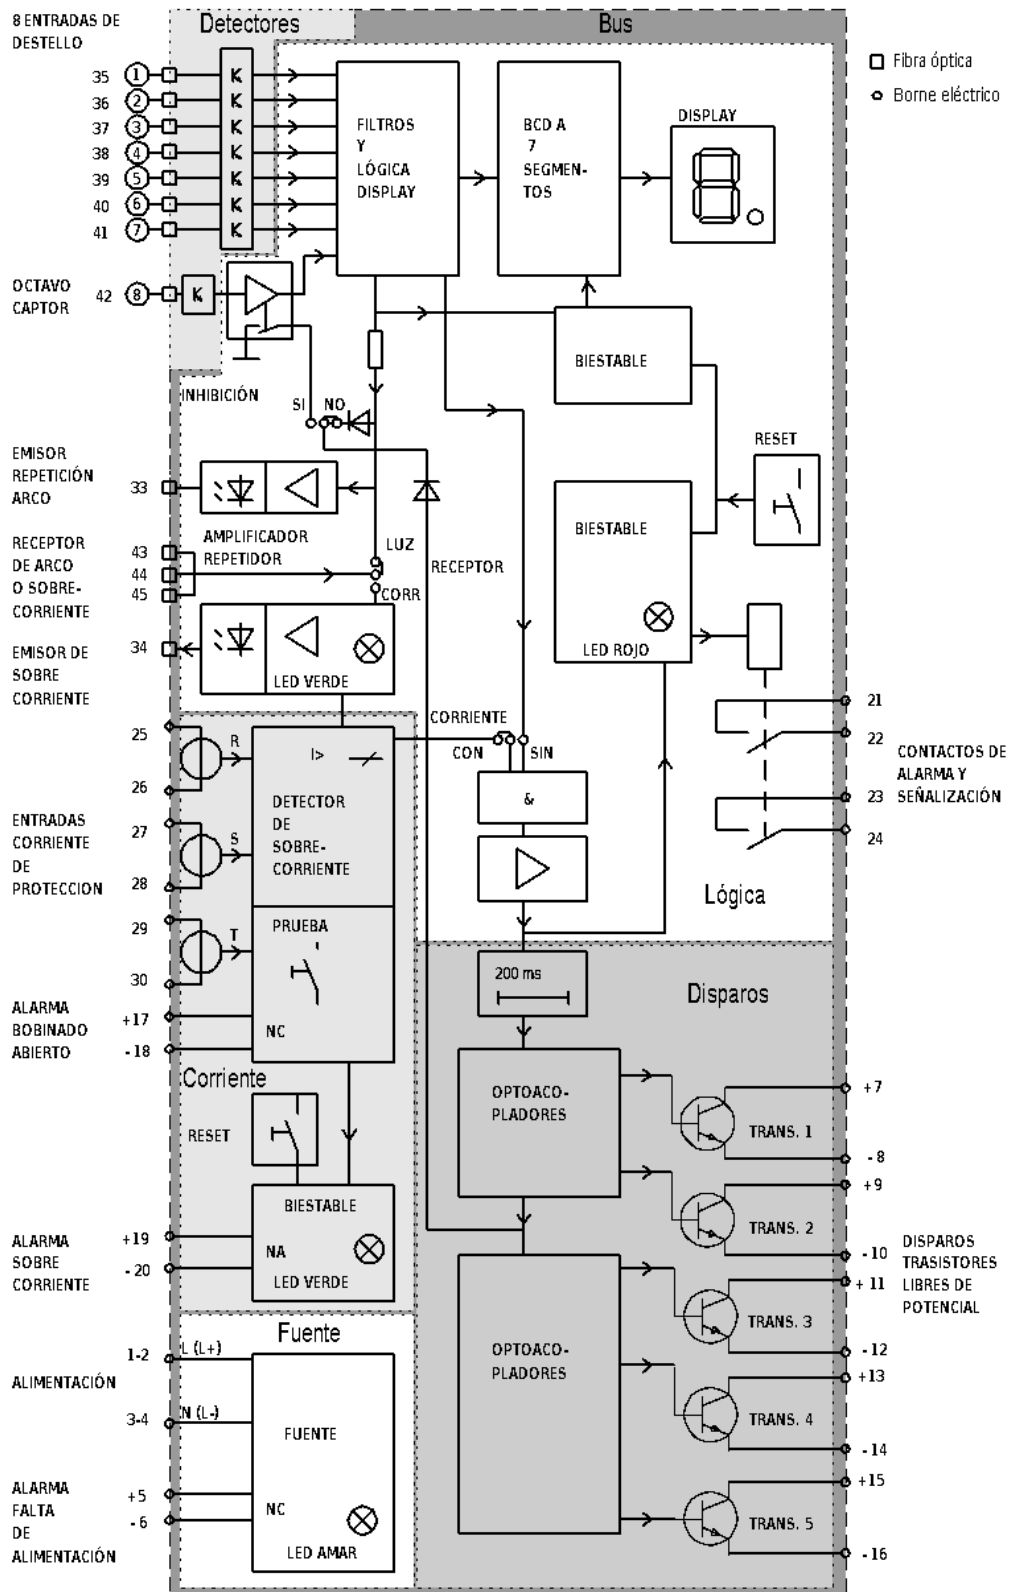


9 - Blocks diagram MAI2-CC-TC

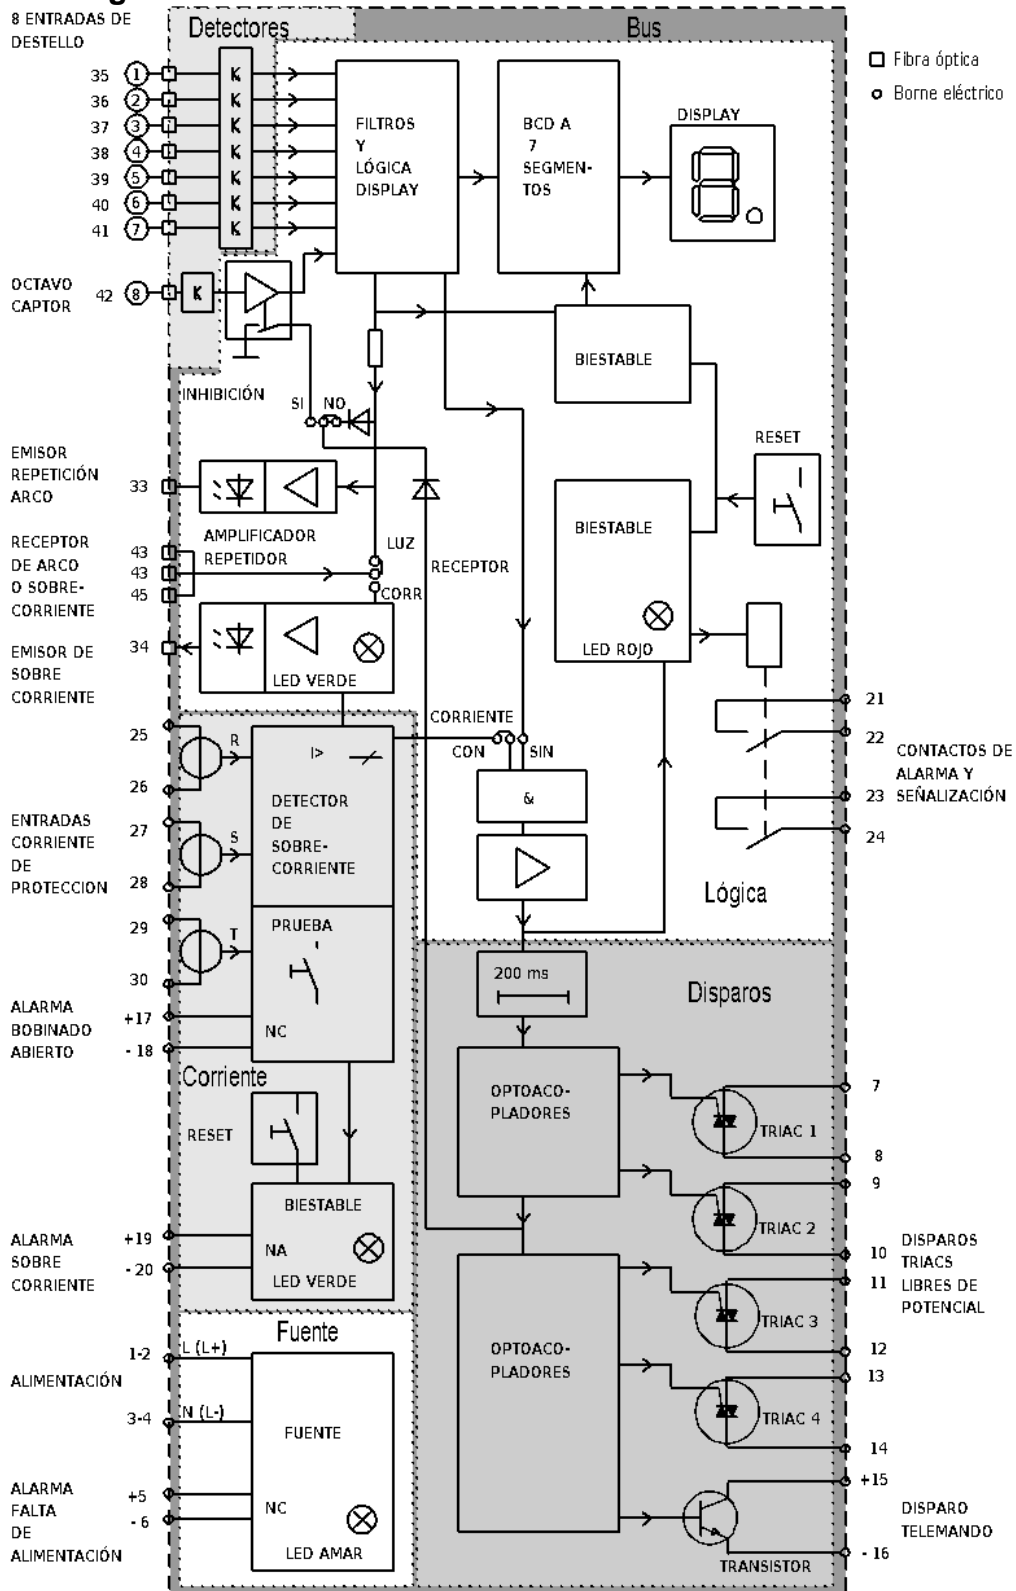





10 - General blueprint MAI2

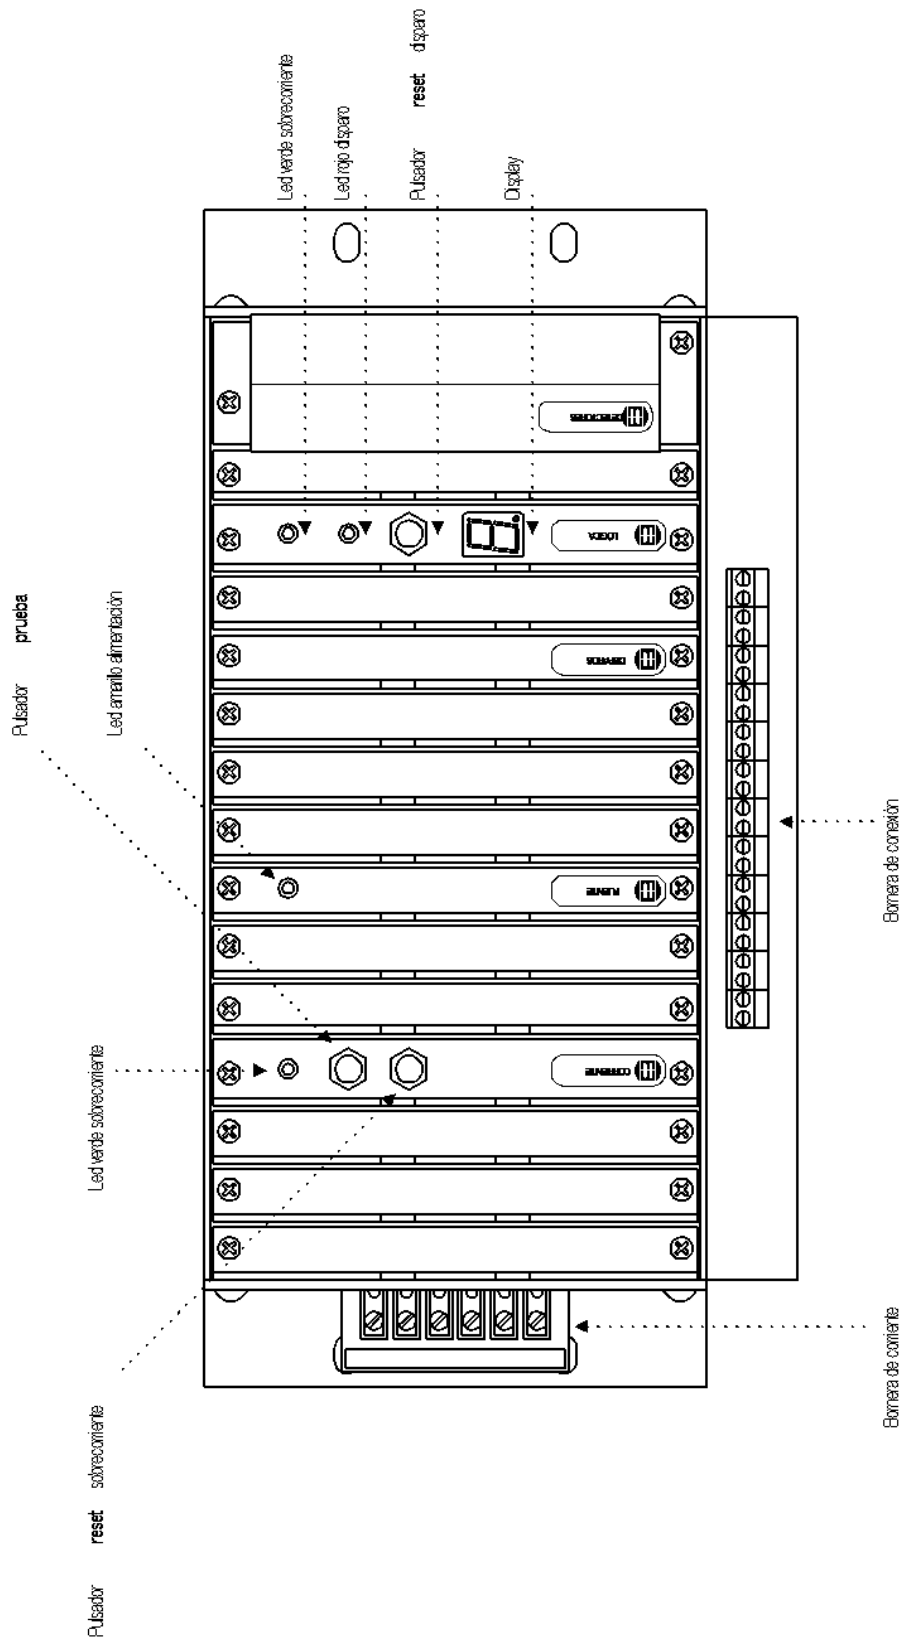

11 - Dimensional blueprint MO2

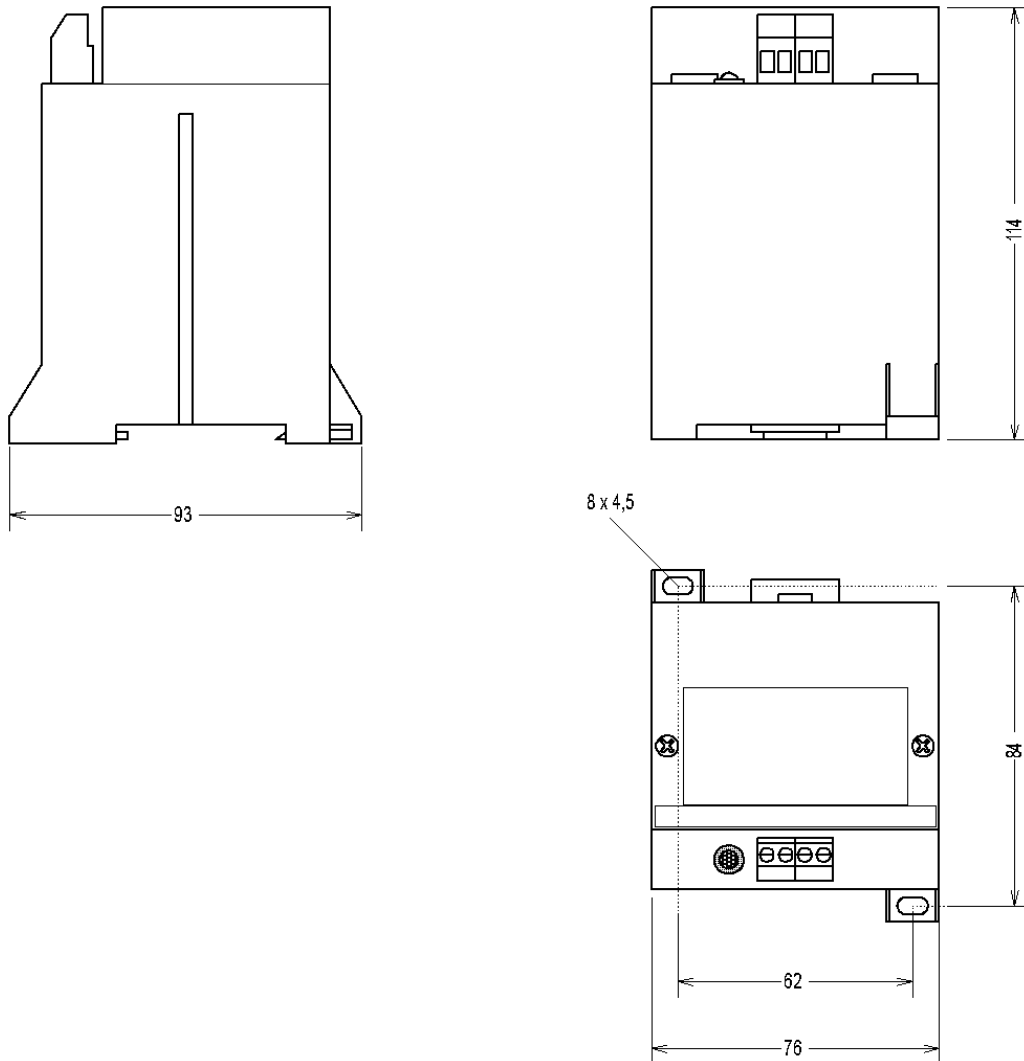


12 - Blocks diagram MO2

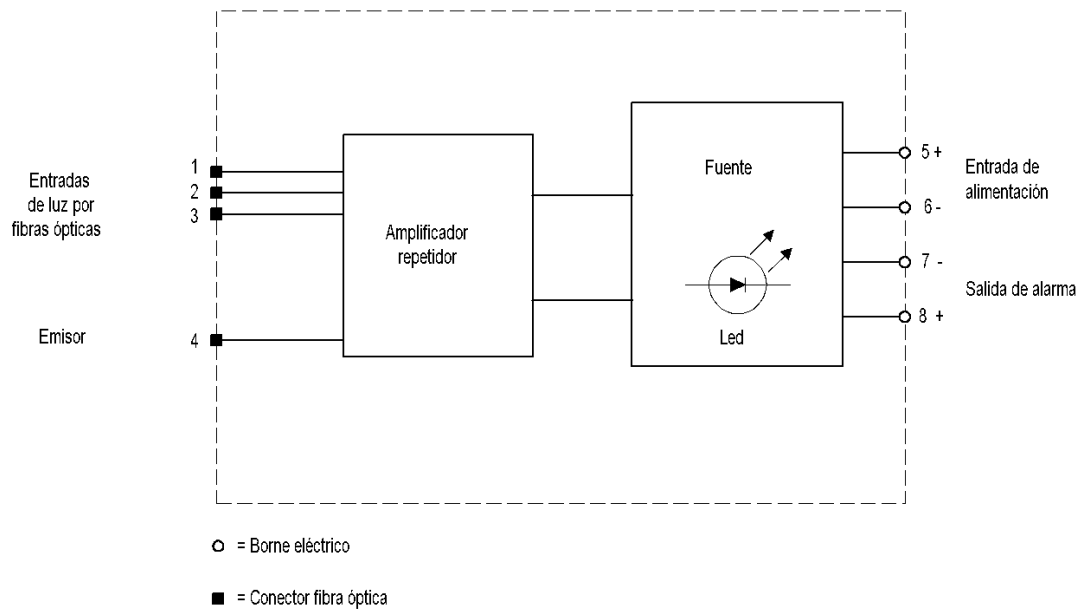



13 - Typical wiring MAI2/MO2.

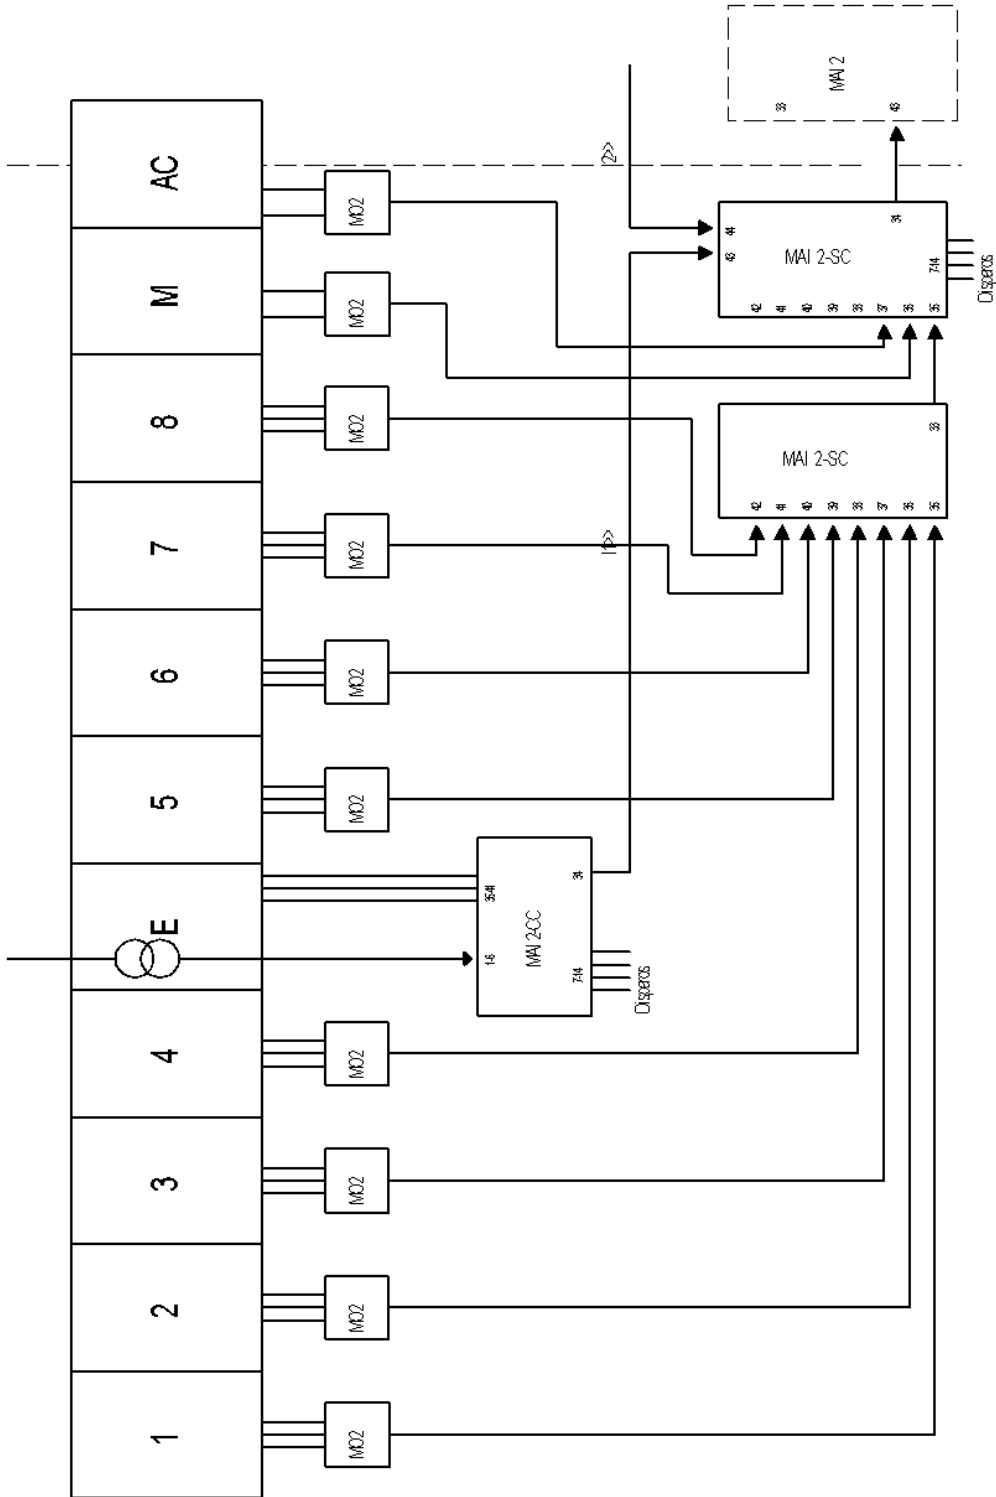



TECHNICAL SERVICE (HELP DESK)

PHONE: +54-11-4925-4843 / +54-11-4923-9060

FAX: +54-11-4923-5595

ventas@boherdi.com.ar

Address: Muñiz 1858 – Buenos Aires (Capital Federal)

República Argentina

CP: 1255ACP